








Disc	Logo	Indication in these operating instructions	Remarks	
DVD-RAM		RAM	Recorded using Version 1.1 of the Video Recording Format (a unified video recording standard).	<ul style="list-style-type: none"> Recorded with DVD video recorders, DVD video cameras, personal computers, etc. Remove discs from their cartridges before use.
		JPEG	Recorded using the DCF (Design rule for Camera File system) standard.	<ul style="list-style-type: none"> Recorded with Panasonic DVD-Video recorders To play JPEG files, select "Play as Data Disc" in Other Menu (→ page 11).
DVD-Audio		DVD-A	—	—
		DVD-V	Some DVD-Audio discs contain DVD-Video content. To play DVD-Video content, select "Play as DVD-Video" in Other Menu (→ page 11).	—
DVD-Video		—	—	—
DVD-R		DVD-V	Panasonic DVD-R recorded and finalized* on a Panasonic DVD-Video recorders or DVD-Video cameras are played as DVD-Video on this unit.	—
Video CD		VCD	—	—
SVCD			Conforming to IEC62107	—
CD		CD	<p>This unit is compatible with HDCD. HDCD-encoded CDs sound better because they are encoded with 20 bits, as compared with 16 bits for all other CDs.</p> <ul style="list-style-type: none"> During HDCD play, "HDCD" lights on the unit's display. 	—
CD-R CD-RW	—	WMA MP3 JPEG CD VCD	<ul style="list-style-type: none"> This unit can play CD-R/RW (audio recording disc) recorded with the formats on the left. Close the sessions or finalize* the disc after recording. HighMAT discs WMA, MP3 or JPEG files only. To play without using the HighMAT function, select "Play as Data Disc" in Other Menu (→ page 11). 	—

*A process that allows play on compatible equipment.

• It may not be possible to play the above discs in all cases due to the type of disc or condition of the recording.

■ Discs that cannot be played

DVD-ROM, CD-ROM, CDV, CD-G, DVD+R, +RW, DVD-RW, SACD, Divx Video Discs and Photo CD, DVD-RAM that cannot be removed from their cartridge, 2.6-GB and 5.2-GB DVD-RAM, and "Chaoji VCD" available on the market including CVD, DVCD and SVCD that do not conform to IEC62107.

■ Audio format of DVDs

You can play discs with these symbols.



■ To prevent damage

- Do not;
 - load more than one disc per tray.
 - touch the drawer or the carousel while they are in motion
 - rotate the carousel by hand.
 - close the drawer by hand.

■ To clean discs

DVD-A **DVD-V** **VCD** **CD**

Wipe with a damp cloth and then wipe dry.

RAM **DVD-R**

- Clean with an optional DVD-RAM/PD disc cleaner (LF-K200DCA1, where available).
- Never use cloths or cleaners for CDs etc.



■ Disc handling precautions

- Do not attach labels or stickers to discs (This may cause disc warping, rendering it unusable).
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs etc).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.



HighMAT™ and the HighMAT logo are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries.